

Sensor Type Hand Helds

Date

Source In-House

11/21/2001

Problem **Part Nr.** GT-521

OK X

What is the output on the DB9 connector for the alarms when an alarm is set?

Product AIR Products

Solution

The alarms on the GT-521 are accessed at pins 6 and 7. Alarm #1 output is at pin #6 referenced to Pin #5 (GND) and Alarm #2 output is at Pin #7, referenced to pin #5 (GND).

