

**Sensor Type** Hand Helds

**Source** In-House

**Date**

7/25/2001

**Problem**      **Part Nr.** GT-521

**OK**

Instructions to erase data from memory using keypad.

**Product** AIR Products

### **Solution**

Instructions to erase data from memory (Reset) using keypad.

1. Press "Menu" key to display menu.
2. Scroll to "Print Options" and press "Enter"
3. Scroll to "Memory" and press "Enter"
4. Scroll to "Memory %:" and press "Enter"
5. Scroll to "Memory Clr (Y/N)" and use L/R key to select "Y" and press "Enter"

Note: Use Up & Down arrow keys to scroll through menu. Use Left & Right arrow keys to select options.

