


## AIR PLUS 5 INSTALLATION GUIDE FOR WINDOWS 11 OPERATING SYSTEM

The Air Plus 5 installation process begins with the installation of SQL Server 2012 Express which is not compatible with Windows 11 computers. Microsoft SQL Server 2022 Express must be used in these cases. The utility for installing Air Plus 5 on Windows 11 does not exist yet, so the SQL Server 2022 Express and Air Plus 5 software must be installed manually.


The following steps detail how to successfully install Air Plus 5 on a Windows 11 computer. These steps will also work on a Windows 10 computer.

1. Download Microsoft SQL Server 2022 Express from the Microsoft.com website.
2. Launch the SQL Server 2022 Express installer and select the Basic installation type or consult with your IT department regarding the other installation types.

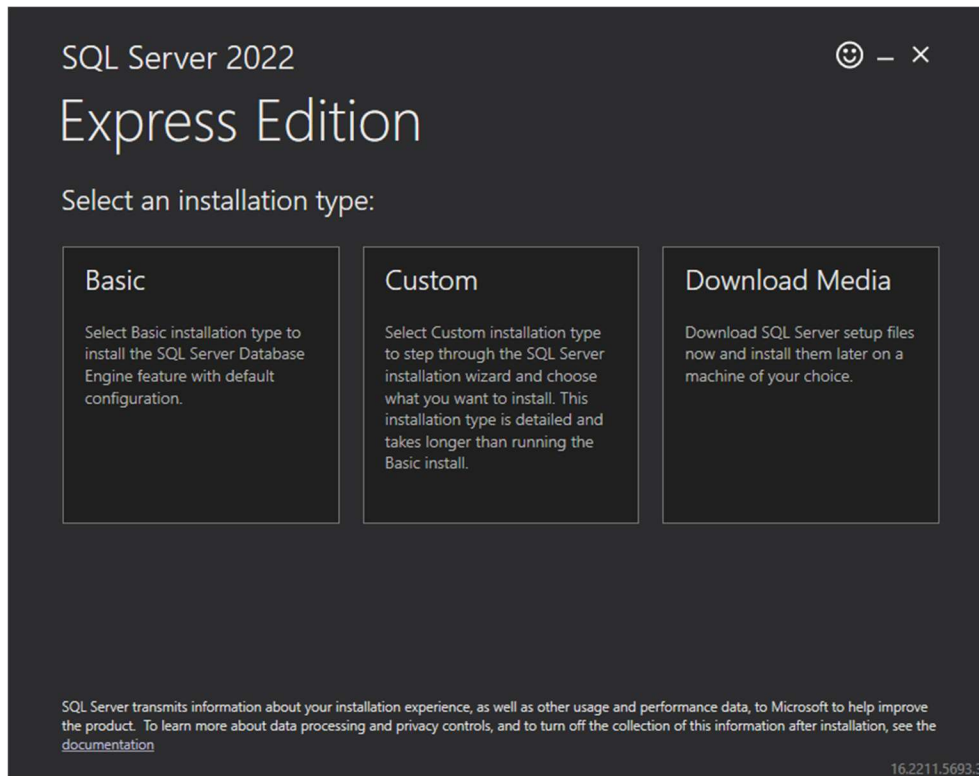


1600 Washington Blvd. Grants Pass, Oregon 97526  
Phone (541) 471-7111 Fax (541) 471-7116  
www.MetOne.com Service.MOI@ACOEM.com

3. Accept the License Terms, choose the installation location, and select Install.

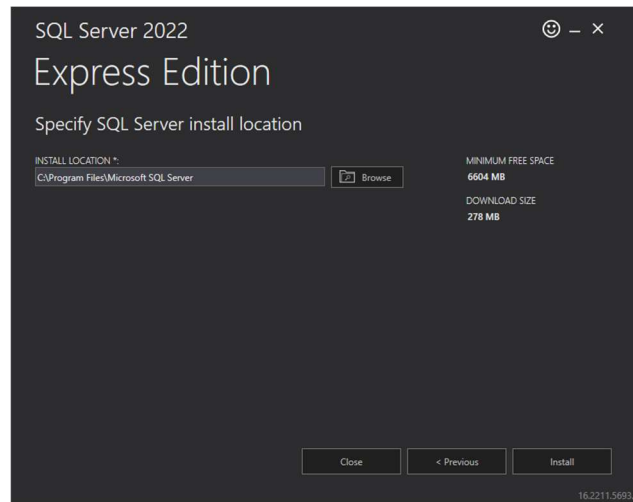

4. Select Close once the installation is complete.

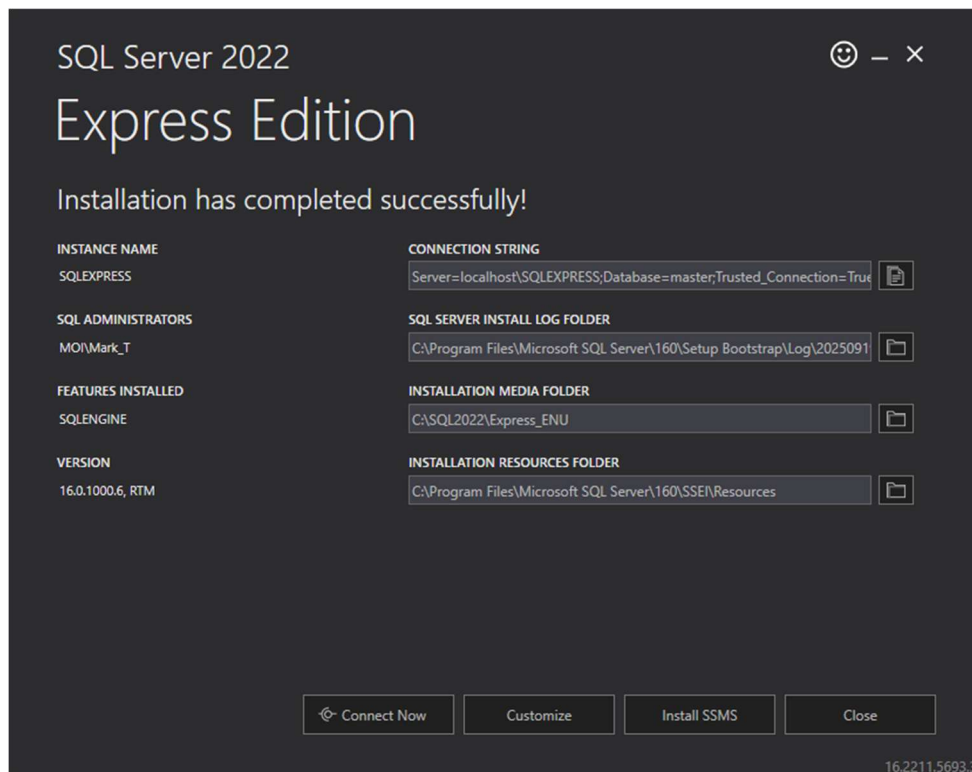


1600 Washington Blvd. Grants Pass, Oregon 97526  
Phone (541) 471-7111 Fax (541) 471-7116  
www.MetOne.com Service.MOI@ACOEM.com

- From the USB Thumb Drive containing the Air Plus 5 software, launch the AirPlus5.msi file and follow the installation instructions.

**Note:** Do not run the setup.exe file! This will attempt to install the outdated version of the SQL Server Express software.

Name	Date modified	Type	Size
Yesterday			
version.txt	9/18/2025 9:08 AM	Text Document	1 KB
setup.exe	9/18/2025 9:08 AM	Application	1,271 KB
5.12.2.2015	9/18/2025 9:08 AM	2015 File	0 KB
AirPlus5.msi	9/18/2025 9:08 AM	Windows Installer ...	12,520 KB
WindowsInstaller4_5	9/18/2025 9:08 AM	File folder	
SqlExpress2012	9/18/2025 9:08 AM	File folder	
DotNetFX461	9/18/2025 9:08 AM	File folder	

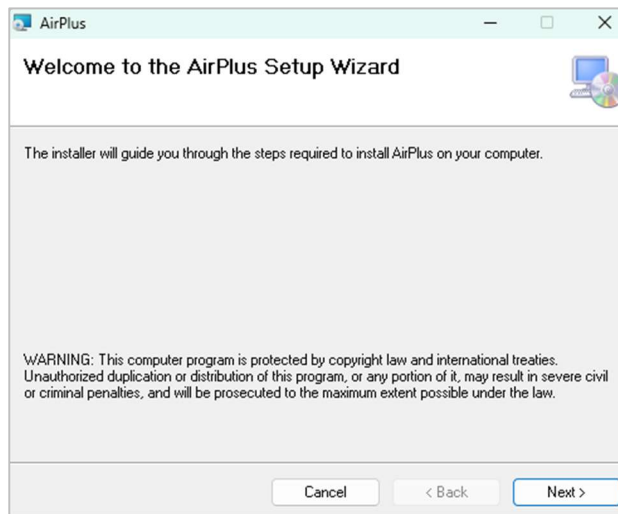

If there are any further questions or concerns, please contact the Met One Instruments, Inc. Service department via email at [Service.MOI@ACOEM.com](mailto:Service.MOI@ACOEM.com) or by phone at 541-471-7111.



1600 Washington Blvd. Grants Pass, Oregon 97526  
Phone (541) 471-7111 Fax (541) 471-7116  
[www.MetOne.com](http://www.MetOne.com) [Service.MOI@ACOEM.com](mailto:Service.MOI@ACOEM.com)