## E-FRM REFERENCE METHOD PARTICULATE SAMPLER OPERATION MANUAL

DOCUMENT NUMBER: E-FRM-9800, Rev H



Met One Instruments, Inc. 1600 NW Washington Blvd. Grants Pass, OR 97526 Telephone: (541) 471-7111 Facsimile: (541) 471-7116 www.metone.com

**E-FRM Particulate Sampler Operation Manual** - © Copyright 2013 Met One Instruments, Inc. All Rights Reserved worldwide. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any other language in any form without the express written permission of Met One Instruments, Inc.

#### **Table of Contents**

1	INTRODUCTION	3
	1.1 About This Manual	
	1.2 Technical Service	
	1.3 E-FRM: Environmental Federal Reference Method Sampler	
	1.4 Reference Documents	
2	1.5 Model E-FRM Specifications	6 7
2	SITE SELECTION and SETUP	•
	2.1 Site Selection and Inlet Positioning Criteria	
	<ul><li>2.2 Electrical Service</li><li>2.3 Instrument Assembly and Deployment Instructions</li></ul>	
3	2.4 Configuring The Unit for PM <sub>2.5</sub> or Other Particulate Cut-Points SCHEDULING SAMPLE EVENTS and SAMPLER OPERATION	15 16
3		
	<ul><li>3.1 The Main Menu and Using the Keypad and Display</li><li>3.2 Setting Up New Sample Events Using the Event Manager</li></ul>	
	3.3 Setting Event Defaults for Length and PM Type	
	3.4 Setting the Clock	
	3.5 Setting the Unit ID	
	3.6 Clearing Event History and Data Files from Memory	
	3.7 Viewing Current and Previous Sample Events	
4	FLOW CONTROL SYSTEM AUDITS and CALIBRATIONS	24
	4.1 Flow System Diagram	
	4.2 Quick Temperature, Pressure, & Flow Checks Using System Test	
	4.3 Leak Check and Flow Audit Intervals	
	4.4 Leak Check Procedures and Leak Troubleshooting	
	4.5 Ambient and Filter Temperature Audits and Calibrations	
	4.6 Barometric Pressure Audits and Calibrations	
	4.7 Flow Audits and Multi-Point Calibration	
5	MAINTENANCE and TROUBLESHOOTING	30
	5.1 Met One Recommended Periodic Maintenance Table	30
	5.2 Sampler Error and Alarm Descriptions	30
	5.3 Basic Problem and Cause/Solution Table	
6	DATA RETRIEVAL	32
	6.1 Using the RS-232 or USB Cable Connections	32
	6.2 Using a USB Flash Drive	
7	SERIAL COMMUNICATIONS	32
	7.1 User Communication	33
	7.2 Computer Communication	34
8	ACCESSORIES and PARTS	34
	8.1 Consumables, Replacement Parts, and Accessories	34

## **1 INTRODUCTION**

#### 1.1 About This Manual

This document is organized with the most important information toward the front of the manual. All users should read and understand the sections on setup, operation, and field audits. Toward the back are sections that provide in-depth information on subjects such as diagnostics and accessories. These sections should be consulted as needed.

This manual is periodically revised for maximum accuracy and to incorporate new features or updates. User feedback is welcome. Electronic versions of this manual are available upon request.

#### 1.2 Technical Service

Should you still require support after consulting your printed documentation, we encourage you to contact one of our expert Technical Service representatives during normal business hours of 7:00 a.m. to 4:00 p.m. Pacific Standard Time, Monday through Friday. In addition, technical information and service bulletins are often posted on our website. Please contact us and obtain a Return Authorization (RA) number before sending any equipment back to the factory. This allows us to track and schedule service work and to expedite customer service.

Contact	Tel: + 541 471 7111	Address:	Met One Instruments, Inc.
Information:	Fax: + 541 471 7115		1600 Washington Blvd
	Web: http:/www.metone.com		Grants Pass, Oregon
	Email: <u>service@metone.com</u>		97526 U.S.A.

Please have your instrument serial number available when contacting the manufacturer. On most models manufactured by Met One Instruments, it will be located on a silver product label on the unit, and also printed on the calibration certificate. The serial number will begin with a letter and be followed by a unique four or five digit number such as F8029 or M20584.

## 1.3 E-FRM: Environmental Federal Reference Method Sampler

The Met One Instruments, Inc. Model E-FRM is a programmable single-event filter sampler designed to meet federal specifications as a reference method for the determination of daily PM<sub>2.5</sub> or PM<sub>10</sub> particulate concentrations in ambient air.

It employs a single pre-weighed 47 mm sample filter disc in an EPA-standardized cassette which must be manually exchanged by the operator prior to each sample period. The instrument runs a sample period based on an operator programmed start time and sample duration.

A vacuum pump, controlled to 16.67 liters-per-minute, draws ambient air through a series of standardized inlets that provide the  $PM_{2.5}$  or  $PM_{10}$  cut points. The sample then passes through the filter, where the airborne particulate matter is deposited.

The dirty filter is collected after the sample period and sent to a lab to be equilibrated and reweighed per the standardized EPA gravimetric procedures. The resulting clean and dirty mass values for the filter are then correlated to the volume of air sampled to determine the concentration of particulate in micrograms-per-cubic-meter ( $\mu$ g/m3)

The E-FRM can easily be configured for reference method PM<sub>2.5</sub> sampling using the standardized BGI VSCC<sup>™</sup> very-sharp-cut cyclone, the URG-2000-30EGN cyclone, or the classic WINS Impactor.

Alternately, other sharp-cut cyclones can be installed for non-designated or indicative  $PM_{2.5}$  or  $PM_1$  sampling.

If  $PM_{10}$  monitoring is desired, the  $PM_{2.5}$  cyclones can be omitted entirely and a pass-through adapter can be installed in its place.

#### 1.3.1 Model E-FRM PM<sub>10</sub> U.S. EPA Federal Reference Method

Designation Number <u>RFPS-0216-231</u>, "Met One Instruments, Inc. E-FRM," configured for filter sampling of ambient particulate matter using the US EPA PM<sub>10</sub> inlet specified in 40 CFR part 50 appendix L, Figs. L-2 thru L-19, with a flow rate of 16.67 L/min, using 47 mm PTFE membrane filter media, and operating with firmware version R2.0.1 and later, and operated in accordance with the Met One E-FRM PM<sub>10</sub> operating manual. This designation applies to PM<sub>10</sub> measurements only.

#### 1.3.2 PM<sub>2.5</sub> U.S. EPA Federal Reference Methods

#### BGI Very Sharp Cut Cyclone (VSCC) or WINS Impactor

Designation Number <u>RFPS-0315-221</u>, "Met One Instruments, Inc. E-FRM," configured for filter sampling of ambient particles using the US EPA PM<sub>10</sub> inlet specified in 40 CFR 50 Appendix L, Figs. L-2 thru L-19, equipped with either a BGI VSCC<sup>™</sup> cyclone or WINS PM<sub>2.5</sub> fractionator, with a flow rate of 16.67L/min, using 47 mm PTFE membrane filter media, and operating with firmware version R1.1.0 and later, and operated in accordance with the Met One E-FRM PM<sub>2.5</sub> operating manual.

#### URG-2000-30 EGN Cyclone

Designation Number <u>EQPS-0316-235</u>, "Met One Instruments, Inc. E-FRM," configured for filter sampling of ambient particulate matter using the US EPA PM<sub>10</sub> inlet specified in 40 CFR 50 Appendix L, Figs. L-2 thru L-19, equipped with a URG-2000-30EGN Cyclone particle size

separator, and operated for a continuous 24-hour sample period at a flow rate of 16.67 liters/minute, using 47 mm PTFE membrane filter media, and operating with firmware version R1.1.0 and later, and operated in accordance with the Met One E-FRM PM<sub>2.5</sub> operating manual.

#### 1.3.3 Model E-FRM Coarse U.S. EPA Federal Reference Method

Designation Number <u>RFPS-0316-232</u>, "Met One Instruments, Inc. E-FRM-PM<sub>10</sub> and E-FRM-PM<sub>2.5</sub> Sampler Pair" for the determination of coarse particulate matter as PM<sub>10-2.5</sub>, consisting of a pair of Met One Instruments, Inc. E-FRM samplers, with one being the E-FRM PM<sub>2.5</sub> sampler (RFPS-0315-221) and the other being the E-FRM PM<sub>10</sub> sampler (RFPS-0216-231). The units are to be collocated to within 1-4 meters of one another and sample concurrently. Both units are operated in accordance with the associated E-FRM instruction manual. This designation applies to PM<sub>10-2.5</sub> measurements only.

#### 1.4 Reference Documents

The following documents provide additional or related information on the regulations, methods, and standard operating procedures for reference method samplers:

- Quality Assurance Guidance Document 2.12. Monitoring PM<sub>2.5</sub> in Ambient Air Using Designated Reference or Class I Equivalent Methods. U.S. EPA, National Exposure Research Laboratory. Research Triangle Park, NC, May 1998 or later.
- Title 40 Code of Federal Regulations (40 CFR), Part 50, Appendix L. *REFERENCE METHOD FOR THE DETERMINATION OF FINE PARTICULATE MATTER AS PM*<sub>2.5</sub> IN THE ATMOSPHERE.

## 1.5 Model E-FRM Specifications

PARAMETER	SPECIFICATION				
Measurement Principle:	Programmable single-event filter sampler for ambient PM <sub>2.5</sub> particulate concentrations by gravimetric laboratory analysis.				
Resulting Data Units:	Micrograms per actual cubic meter µg/m <sup>3</sup> . Calculated from lab filter weights.				
Design Specifications:	Title 40 CFR, Part 50 Appendix L.				
U.S. EPA Designations:	Federal Reference Methods RFPS-0315-221, RFPS-0216-231, RFPS-0316-232, and EQPS-0316-235 (see section 1.3)				
Main Inlet Type:	EPA-pattern PM <sub>10</sub> size-selective louvered inlet standard (Met One BX-802).				
PM <sub>2.5</sub> Separator Type:	BGI VSCC-A <sup>™</sup> Cyclone or URG-2000-30EGN Cyclone (WINS Impactor optional)				
PM <sub>10</sub> Sampling Config:	Pass-through tube (used in place of cyclone) included for PM <sub>10</sub> sampling.				
Other Configurations:	Compatible with PM <sub>2.5</sub> or PM <sub>1</sub> SCC cyclones. TSP inlet available.				
Filter Type:	47mm PTFE disc filters standard. Other filter material types available.				
Filter Holder:	Accommodates standard EPA-pattern white Delrin filter cassettes.				
Filter Temp Control:	Within 5 degrees C of ambient, sampling and standby. Logged in data.				
Operating Temperature:	-30 to +50 degrees C, Ambient.				
Operating Pressure:	600 to 800 mmHg, Ambient.				
Sample Events:	24 hour samples standard. Programmable start date/time and duration.				
Flow Rate:	16.67 L/min (1 m <sup>3</sup> /hr). With flow sensor and real-time actual flow control.				
Flow Accuracy:	±2% (±.33 L/min).				
Flow Records:	Flow rate, temperature, pressure logged in 5 minute intervals.				
Vacuum Pump:	Dual-head diaphragm AC pump standard (specify voltage).				
Upper Conc Limit:	At least 200 µg/m <sup>3</sup> estimated for daily average.*				
Data Collection:	9-Pin RS-232 port. USB data port. USB flash drive port. Software supplied.				
Memory Capacity:	24 sample events				
Compatible Software:	FRMCommAQ; FSCommAQ				
User Interface:	Extended temperature 8x40 character LCD display with dynamic keypad.				
Enclosure Type:	Active fan ventilation with solar shield and separate pump enclosure.				
Deployed Dimensions:	2.0 meters (77") high, 42 cm (16.5") wide, 53 cm (20.75") deep.				
Stowed Dimensions:	105 cm (41") high, 42 cm (16.5") wide, 53 cm (20.75") deep.				
Weight:	Complete System: 33 kg (73 lbs). Removable pump box: 12.7 kg (28 lbs).				
Power:	100 to 125VAC, 2.5 amps nominal, start up current will be greater				

 $^{*}$  The approximate upper concentration limit is based on the samplers ability to maintain 16.67 L/min sample flow over the entire 24 hour period, despite PTFE filter loading with typical urban PM<sub>2.5</sub> particulate. Actual concentration limits will vary depending on ambient conditions, altitude, and particulate type.

Specifications may be subject to change without notice.

## 2 SITE SELECTION and SETUP

Use the following information to correctly assemble, configure, and deploy the E-FRM sampler. Installation of the sampler should ideally be performed by personnel familiar with environmental monitoring equipment. There are no special precautions or handling concerns except for the normal level of care required for handling scientific equipment. Refer to the instructions and diagrams on the following pages.

When unpacking a new instrument, verify that the contents are undamaged. If the shipping cartons are damaged, notify the carrier immediately. Verify that the included accessories are correct and complete. If anything is missing, contact the technical service department at <u>service@metone.com</u> or (541) 471-7111. See the Accessories section at the back of this manual for more details. The normal configuration of the instrument is supplied with the following standard accessories:

- Main weatherproof instrument enclosure with quick deployment aluminum stand
- Removable pump box module with built-in power supply and flow monitoring/control.
- BX-802 EPA Pattern PM10 inlet.
- Pass-through adapter for PM10 sampling.
- One 47 mm filter cassette assembly.
- PTFE sample filters.
- Leak test valve.
- Inlet tube.
- Ambient temperature sensor with solar gill shield.
- Serial communications cable.
- Instruction manual.

The following optional accessories may or may not also be included, depending on the order:

- Non-reference cyclones for PM<sub>2.5</sub> or PM<sub>1</sub> cut-points.
- BX-808 BGI VSCC<sup>™</sup> PM<sub>2.5</sub> cyclone.
- BX-809 URG-2000-30EGN PM<sub>2.5</sub> cyclone.
- Extra 47 mm filter holders or filters.

#### 2.1 Site Selection and Inlet Positioning Criteria

Selection of a proper site for the sampler is critical for accurate measurements. These items must be correctly addressed in order for the collected data to be acceptable for regulatory requirements, such as EPA PM<sub>10</sub> or PM<sub>2.5</sub> data reporting.

Specifications for site selection and inlet positioning for FRM samplers can be found in United States regulation **40 CFR**, **Part 58**, **Appendix D and E**. There are also a variety of EPA guidance documents and quality assurance documents which describe site criteria in detail. In any case, the Code of Federal Regulations takes precedence. Site selection and inlet position criteria may vary in other countries.

**Note:** The sampler location may consist of an elevated site such as a flat rooftop, the top of a walk-in lab shelter, or an elevated platform. The location may also be at or near ground level on a concrete pad or a simple wooden platform. In any case, the location must be level and easily accessible for routine service and filter replacement. Locating the sampler stand directly on the soil is not usually recommended, due to possible intrusion of dirt, insects, and vegetative growth.

#### Inlet Height Criteria:

- The sampler total inlet height must be located in the "breathing zone", between 2 and 15 meters above ground level for neighborhood scale sites. Middle scale or microscale sites require a total inlet height of between 2 and 7 meters.
- If the unit is to be installed on ground level, then the inlet height must be at least two meters above the ground. The sampler stand and enclosure are designed to locate the inlet two meters above whatever surface the unit is placed on.
- If the unit is located on the roof of a building, the inlet height must be no less than two meters above roof surface of the building. The total height must be no more than 15 meters above ground level.
- If the sampler is to be collocated with other particulate instruments, such as BAM units or other samplers or monitors, then the air inlets must all be the same height within one meter vertically. Met One recommends a tighter tolerance of within 30cm (1 foot).
- If the sampler inlet is the highest metallic point on a building, then a lightning rod must be installed to prevent destruction of the sampler during electrical storms.

#### Inlet Spacing and Clearance Criteria:

- If the sampler is to be collocated with another instrument, such as a BAM-1020 or other sampler or monitor, then the inlets must be spaced between one and four meters apart. Two meter spacing is recommended where possible.
- If installed near a PM<sub>10</sub> high-volume sampler, then the distance between the inlet of the sampler and the Hi-Vol should be no less than three meters.
- The sampler inlet must be unobstructed for two meters in all directions from any object that may influence airflow characteristics, such as walls, parapets, or structures on a rooftop.
- If located beside a major obstruction (such as a building), then the distance between the inlet and the building should be equal to twice the height of the building.
- There must be at least a 180 degree arc of completely unrestricted airflow around the sampler inlet. The predominant wind direction during the highest concentration season must be included in the 180 degree arc.
- The sampler inlet must be at least 10 meters from the drip line of any trees.

#### Artificial Particulate Sources:

To avoid possible errors in the concentration measurements, the inlet must be located as far as possible from any artificial sources of particulate, such as blowers or vents on a rooftop. Even sources of filtered air must not blow across the sampler inlet.

#### Spacing from Roadways:

Except for microscale studies or purposeful near-road studies, the sampler should usually not be located directly next to a major highway or arterial roadway, as vehicle exhaust will dominate the concentration measurement. Criteria for roadway spacing of particulate

monitors can be complicated. See 40 CFR Part 58 - Appendix E, section 6.3 (July 2009).

- For general neighborhood scale monitoring, the sampler should be at least 10 meters away from a road with a daily traffic volume of less than 1,000 vehicles, at least 30 meters from a road with a volume of 20,000 vehicles, at least 100 meters from a road with a volume of 70,000 vehicles, and at least 250 meters from a road with a volume of greater than 110,000 vehicles.
- The unit should be located as far as possible from unpaved roadways, as these also cause artificial measurements from temporarily suspended fugitive dust.
- The unit should usually not be installed in unpaved areas unless year-round vegetative ground cover is present, to avoid the effects of re-entrained fugitive dust.

#### 2.2 Electrical Service

The standard version of the E-FRM sampler is either 120V or 230V AC powered, depending on which vacuum pump is ordered. A standard U.S.A. type power cord is supplied with all 120V units, and a European Schuko type cord is supplied with all 230V units. Special cording may be available upon request.

The sample site needs to be equipped with AC power and a standard weatherproof outdoor electrical outlet. The sampler is rated at 2.5 amps max continuous with the pump running. Pump start-up inrush current is higher. An earth-ground point near the unit is recommended.

For critical applications where possible sample invalidations due to power failures are unacceptable, the sampler should be equipped with a backup uninterruptable power supply (UPS). The supply must be rated for the electrical load, and must be appropriately configured for an outdoor application. Consult a qualified electrical contractor.

#### 2.3 Instrument Assembly and Deployment Instructions

The E-FRM sampler is designed for easy setup and deployment. This allows it to be used for either permanent long-term sampling at a fixed site, or for portable audit sampling.

- 1. **Deploy the Upper Filter Enclosure:** The sampler should be shipped and stored in the stowed configuration shown in Figure 2-1.
  - a. Remove the two wing screws (one on each side) that hold the upper enclosure in the stowed position in the stand.
  - b. Locate the handle mounted on the top of the upper enclosure. Note that when the upper enclosure is in the stowed position, this handle will be on the bottom.
  - c. Grasp the handle and rotate the enclosure forward into the vertical position as shown in Figure 2-2.
  - d. Fasten the upper enclosure in the deployed position by installing the two wing screws into the deployed hole positions in the stand.

**Note:** It is not necessary to remove or loosen the two pivot screws that hold the upper enclosure and the stand together.

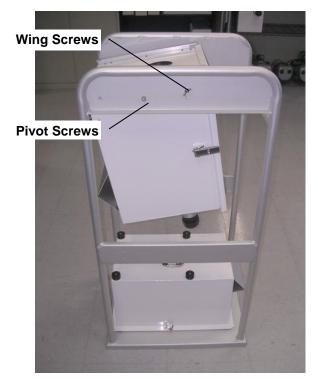


Figure 2-1 Stowed Orientation



**Figure 2-2 Deployed Orientation** 

- 2. **Install the Pump Box Module:** The pump box is stowed in the bottom of the stand and must be mounted to the bottom of the upper enclosure for operations.
  - a. Open the door of the upper enclosure for better visibility. Remove the two wing nuts that retain the pump box module in the base of the stand and the one wing nut in the spacer on top of the pump box.
  - b. Lift the pump box out of the stand and slide it onto the rails on the bottom of the upper enclosure, as shown in Figure 2-3. Slide the pump box all the way back until it stops.
  - c. Install the wing screw through the floor of the upper enclosure and into the spacer on top of the pump box. This is a security feature to prevent the pump box from vibrating out of position or from being removed without access to the inside of the main enclosure.
  - d. Uncoil the power cord, pump box signal cord, and vacuum tube from the bottom of the pump box.
  - e. Connect the vacuum tube and pump box cord to the back of the upper enclosure as shown in Figure 2-4.



Figure 2-3 Pump Box Deploys by Sliding in to Rails Shown Here

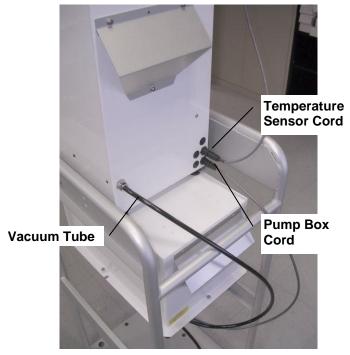


Figure 2-4 Cord and Tubing Connections

#### 3. Install the Temperature Sensor and External Inlets:

a. Install the ambient temperature sensor to the upper enclosure as shown in Figure 2-5.

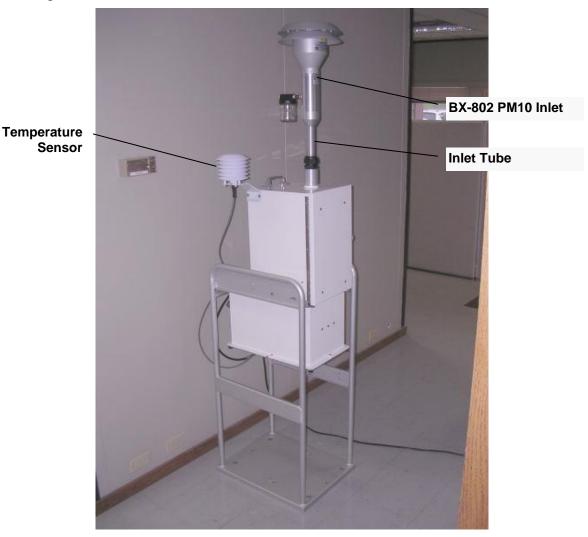


Figure 2-5 Fully Deployed E-FRM Monitor

- b. Connect the temperature sensor cable to the back of the upper enclosure (see Figure 2-4).
- c. Loosen the black plastic fitting on the top of the inlet tube receiver.
- d. Install the vertical inlet tube into the top of the enclosure. The long end of the tube goes down. Make sure the tube snaps into the o-ring socket securely, then tighten the black plastic fitting.
- e. Install the BX-802 PM<sub>10</sub> inlet on top of the inlet tube.

**Note:** The  $PM_{10}$  inlet is used in all configurations of the E-FRM sampler. It serves as a pre-separator for subsequent  $PM_{2.5}$  stages when using either the BX-808 or BX-809 cyclonic separators.

- 4. **Configure the PM<sub>2.5</sub> Cyclone and Filter Holder:** The PM<sub>2.5</sub> cyclone and filter cassette are mounted inside the upper enclosure. Skip to the next section if the sampler is being used to collect PM<sub>10</sub> particulate.
  - a. The sampler is usually supplied with either a VSCC or URG-2000-30EGN PM<sub>2.5</sub> cyclone which should already be installed inside the upper enclosure as shown in Figure 2-6. If it has been removed, it should be installed now by inserting it into the socket in the roof of the sampler.
  - b. The upper filter holder mounts into the bottom of the cyclone.
  - c. A white filter cassette is clamped into the bottom of the upper filter holder with the filter clamp assembly. The clamp assembly is supplied with a detent pin installed in the left side of the filter release handle which prevents it from falling open during shipment. Remove the pin to allow the clamp assembly to be opened by pulling the handle forward. This allows access to the filter cassette.

**Note:** The standard  $PM_{2.5}$  cyclone may be exchanged for a WINS Impactor or  $PM_{10}$  pass-through adapter. In the case of either  $PM_{2.5}$  adapter, the upper filter holder must be used.



Figure 2-6 PM<sub>2.5</sub> Configuration

- 5. **Configure the PM<sub>10</sub> Adapter and Filter Holder:** The PM<sub>10</sub> pass-through adapter and filter cassette are mounted inside the upper enclosure. If monitoring PM<sub>2.5</sub>, follow the instructions in the previous step instead of this one.
  - a. Remove the PM<sub>2.5</sub> cyclone or impactor and the upper filter holder if they are installed.
  - b. Insert the  $PM_{10}$  pass-through adapter into the socket in the roof of the sampler as shown in Figure 2-7
  - c. A white filter cassette is clamped into the bottom of the adapter with the filter clamp assembly. The clamp assembly is supplied with a detent pin installed in the left side of the filter release handle which prevents it from falling open during shipment. Remove the pin to allow the clamp assembly to be opened by pulling the handle forward. This allows access to the filter cassette.

**Note:** The adapter includes the functionality of the upper filter holder in its design so it is not necessary to install it when using the PM<sub>10</sub> pass-through adapter.



PM10 pass-through adapter in place of cyclone

Filter Release Handle

Figure 2-7 PM<sub>10</sub> Configuration

6. **Fasten Down the Stand:** For long-term deployments, the E-FRM sampler stand must be fastened down to the mounting surface in order to prevent wind-toppling, theft, or unauthorized repositioning. This is especially critical if the sampler is located on a platform, rooftop, or other elevated surface. The holes in the base may be utilized to accommodate lag bolts or anchor bolts.

#### 2.4 Configuring The Unit for PM<sub>2.5</sub> or Other Particulate Cut-Points

It is critical for the user to understand and keep track of the exact inlet hardware configuration, in order to ensure that the resulting concentration data is identified for the correct PM classification! The sampler cannot automatically identify the inlet cutpoint configuration. The inlet configuration type should be selected to match the physical setup hardware by the operator through the user interface. This setting will appear in the data files for quality assurance purposes. See Section 3

All standard configurations of the sampler use a standard louvered PM<sub>10</sub> size-selective inlet (Met One BX-802) as the main air inlet for the system. This inlet separates out and traps water, debris, and particles larger than 10 microns in size, while allowing smaller particles through to the sampler. For PM<sub>2.5</sub> sampling, the PM<sub>10</sub> inlet serves as a particulate preseparator for the secondary cyclone or impactor stage inside the sampler. For PM<sub>10</sub> sampling, a pass-through adapter (Met One Instruments part number 81210) is installed in place of a PM<sub>2.5</sub> separator to allow the particulate directly through to the filter.

The sampler is configured for PM<sub>2.5</sub> sampling by using an internal VSCC<sup>™</sup> (Very-Sharp-Cut Cyclone, Met One Instruments part number BX-808) or URG-2000-30EGN cyclonic separator (Met One Instruments part number BX-809) to further separate out and trap particles larger than 2.5 microns in size, while allowing smaller particles through to the sample filter. The particle performance of these cyclones closely match that of the classic WINS Impactor, but with simpler maintenance requirements. All VSCC<sup>™</sup> cyclones are manufactured by BGI, Inc. and all URG-2000-30EGN cyclonic separators are manufactured by URG, Corp. as a condition of the EPA designated status of the cyclones. See <u>www.bgiusa.com</u> and <u>www.urgcorp.com</u> for details.

The classic WINS Impactor, built to 40 CFR Part 50L specifications, is the predecessor to the cyclone BGI and URG cyclones for designated  $PM_{2.5}$  sampling, and is available from Met One Instruments (part number BX-804) upon request. It fits into the same position as the BX-808 and BX-809 inside the sampler.

The cyclone position can accommodate an older style SCC (Sharp-Cut-Cyclone, Met One Instruments part number BX-807) for less common PM<sub>2.5</sub> sampling applications where a lower cost system is needed and EPA designation is not required for the resulting data. The SCC cyclone is very similar to the VSCC<sup>™</sup> and the URG-2000-30EGN cyclone, but is not designated as a Federal Reference Method for PM<sub>2.5</sub>.

The cyclone position can also accommodate a version of the SCC Sharp-Cut-Cyclone for PM<sub>1</sub> sampling (Met One BX-811). This separates out particles larger than 1 micron in size. This configuration is not very common because PM<sub>1</sub> sampling is not currently regulated or designated by the EPA.

## **3 SCHEDULING SAMPLE EVENTS and SAMPLER OPERATION**

This section describes the process for setting up and running scheduled sample periods using the *Event* and *Setup* menus in the E-FRM sampler user interface.

#### 3.1 The Main Menu and Using the Keypad and Display

When the E-FRM sampler is powered up it will display the main top level menu on the LCD display as shown in Figure 3-1. This menu is the starting point for all functions of the sampler.

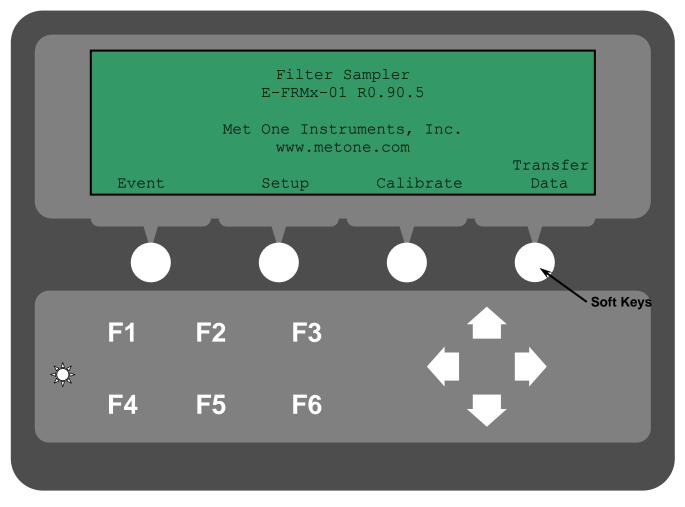


Figure 3-1 The E-FRM sampler User Interface and Keypad

**Soft Keys:** Beneath the display are four white "soft-keys". The function of these buttons change based on menu options displayed above them on the bottom row of the display.

**Arrows:** The four white arrow keys are used to scroll up, down, left, and right, and to move the cursor to select an editable field on the screen. The arrow keys are also often used to increment or decrement values within a selected parameter on the screen.

**Contrast Button:** The sun-shaped button is the LCD contrast adjustment. Press and hold the button until the desired contrast is achieved. The screen contrast will cycle from full to none for as long as this button is pressed. Note that is possible to adjust the contrast so that the entire screen looks blank and the unit appears to be off or nonfunctional when it is not.

F1 to F6: The function buttons F1 to F6 are used to select menu items shown on the display.

#### 3.2 Setting Up New Sample Events Using the Event Manager

Press the "Setup" soft key on the main screen to enter the event setup menu as shown:



Figure 3-2 E-FRM Event Setup Menu

Press F1 to select the Event Manager screen. If there are no programmed events already set up in the event manager, the screen will show no event parameters as shown in Figure 3-3:

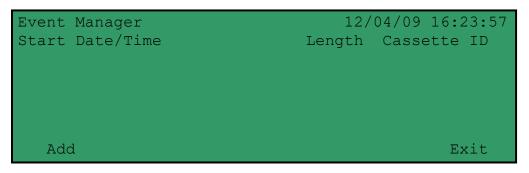


Figure 3-3 E-FRM Event Manager with No Event Programmed

Press the "Add" soft key to program a new sample event

Add Event		12/04/09	16:23:57
		YY/MM/DD	HH:mm
	Event Start:	12/04/10	09:00
	Event Length:		23:00
	Cassette ID:	0003	
	PM Type:	PM2.5 VSC	C
	Standard Temperature:	25 C	
Add	De	fault	Exit

#### Figure 3-4 E-FRM Event Manager – Add Event

Use the  $\triangleleft \triangleright$  keys to select the date and time fields and the  $\lor \blacktriangle$  keys to edit them to the desired values. For the example above, the user wants to start running daily samples with a filter change window between 8:00 and 9:00 am. So the Event Start is set to tomorrow morning (April 10<sup>th</sup>) at 9:00 am.

The "Event Length" parameter will default to the value specified in the "Event Defaults" menu, and will almost always be set to either 23 or 24 hours. Use the  $\triangleleft \triangleright$  keys to select the field and the  $\blacktriangledown \blacktriangle$  keys to edit the value if needed. For the example above, the user wants to run daily samples, so the Event Length is set to 23 hours to allow one hour for filter changes before the next sample is started.

If the user wanted to run samples on a 1-in-3 or 1-in-6 day schedule, then he might set the Event Start value to midnight, and the Event Length value to 24 hours, since there is plenty of time between samples to collect and replace the filter.

The "Cassette ID" parameter is used to enter the unique lab identification number of the sample filter, which will then appear in the sampler data files to allow the data to be correlated to the specific filter for quality assurance purposes. This value is usually assigned by the lab which pre-weighed the clean filter. The value can be set to any number between 0001 and 9999. Use the  $\blacktriangleleft \triangleright$  keys to select the field and the  $\blacktriangledown \blacktriangle$  keys to edit the value if needed.

The "PM Type" parameter is used to identify the physical inlet configuration of the sampler for quality assurances purposes, and will also appear in the sampler data files. *It is up to the user to make sure that this value matches the actual physical configuration of the inlet parts.* See Section 2.3. Once established initially, this value is rarely changed. The parameter can be set to the following values:

PM2.5 VSCC	Internal BX-808 or BX-809 Cyclone installed (most common)				
PM2.5 SCC	Internal PM <sub>2.5</sub> Sharp-Cut Cyclone installed (uncommon)				
PM2.5 WINS	Internal PM <sub>2.5</sub> WINS Impactor installed.				
PM10	Internal pass-through adapter installed, no cyclone or impactor used.				
PM1 SCC	Internal PM1 Sharp-Cut Cyclone installed. (uncommon)				
TSP	Standard PM <sub>10</sub> inlet replaced with TSP inlet. Internal pass-through				
	adapter installed, no cyclone or impactor. (uncommon)				

#### Table 3-1 E-FRM "PM Type" Options

The "Standard Temperature" parameter is the value of Standard Temperature to be used when calculating the Standard Volume if required for reporting purposes. The value can be set as 0° C, 20° C, or 25° C. Use the  $\blacktriangleleft \triangleright$  keys to select the field and the  $\blacktriangledown \blacktriangle$  keys to edit the value if needed.

After all of the event parameters are set to the desired values, press the "Add" soft key under the display. The menu will exit out to the Event Manager screen, where the new event should appear in the list as shown below. The event can be modified or deleted using the soft keys at the bottom of the screen. Up to four programmed events can be scheduled.

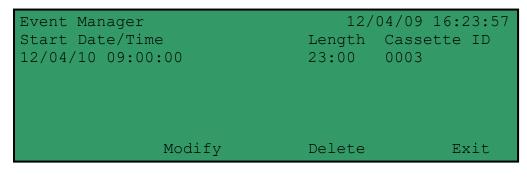


Figure 3-5 E-FRM Event Manager with Programmed Event

## 3.3 Setting Event Defaults for Length and PM Type

From the Setup menu, press the F2 button to enter the Event Defaults menu as shown in Figure 3-6.

Sample Event Defaults		
Event Length:		
Standard Temperature:	PM2.5 VSCC 25 C	
Save		Exit

Figure 3-6 E-FRM Event Defaults Menu

The "Event Length" parameter is the default sample time for new events, and will appear whenever a new event is created as in Section 3.2 above. However, the value can be edited easily in the event setup screen regardless of what this default value is set to. The default can be set to any value from 00:00 to 25:00, but will usually be set to either 23:00 for daily sampling, or 24:00 for 1-in-3 or 1-in-6 day sampling schedules.

The "PM Type" parameter is the default value for the inlet configuration as described in Section 3.2 above. Once established initially, this parameter is rarely changed. The value can be edited easily in the event setup screen regardless of whatever this default value is programmed to be.

The "Standard Temperature" parameter is the default value for the Standard Temperature to be used when calculating Standard Volume. The value can be set as 0° C, 20° C, or 25° C. Once set, this parameter is rarely changed. The value can be edited easily in the event setup screen regardless of whatever this default value is programmed to be.

Press the Save soft key to save the values.

#### 3.4 Setting the Clock

From the Setup menu, press the F3 button to enter the "Clock" screen as shown in Figure 3-7.

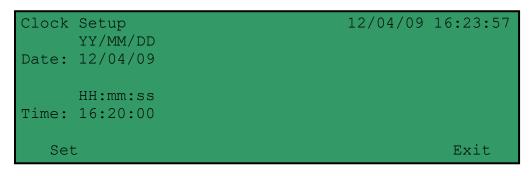



Figure 3-7 E-FRM Clock Setup Screen

The current clock time of the system is shown in the upper right corner of the display. The correct date and time can be entered into the fields on the left side of the screen. Use the  $\blacktriangleleft$  keys to select the desired field and use the  $\P \blacktriangle$  keys to edit the value. Press the Set soft key to make the changes take effect and set the system clock.

In most cases, it is recommended that the sampler clock be checked at least monthly, and maintained to within one minute of the actual time for accurate sample events.

#### 3.5 Setting the Unit ID

From the Setup menu, press the F4 button to enter the "Unit ID/Backlight" screen.

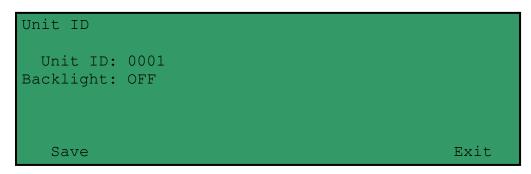

#### Figure 3-8 E-FRM Unit ID/Backlight Screen

The "Unit ID" parameter is used to establish a unique identification number for the sampler or sample site. This value will appear in the data files in order to correlate data to a certain site or sampler. The value can be set to the last four digits of the sampler serial number, or some other appropriate numeric value. <u>This is not to be confused with the Cassette ID value which</u> *identifies the filter and changes for each sample period.* 

The "Backlight" value is used to enable or disable the electroluminescent backlight for the LCD display whenever the unit is on. Most applications don't require the backlight unless filter changes or sampler audits are performed after dark. The backlight has a limited lifetime of a couple of years during continuous use.

Press the Save button when finished editing the values with the arrow buttons.


#### 3.6 Clearing Event History and Data Files from Memory

From the Setup menu, press the F5 button to enter the "Clear Event History" screen. The screen will display a caution message. Press the Clear soft key to erase all logged data, archived events, and currently scheduled events from the sampler memory. Press the Cancel button to exit without erasing the memory.

Warning: Clearing the memory will permanently remove all sampler data and clear all scheduled events!


#### 3.7 Viewing Current and Previous Sample Events

Press the "Event" soft key on the main screen to enter the event viewer menu as shown in Figure 3-9. This menu is used to view the status of current sampling events, and to review the details of previously run samples.

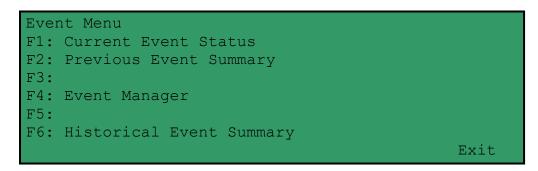

#### Figure 3-9 E-FRM Event Viewer Menu

Press the F1 button to enter the "Current Event Status" screen as shown in Figure 3-10.

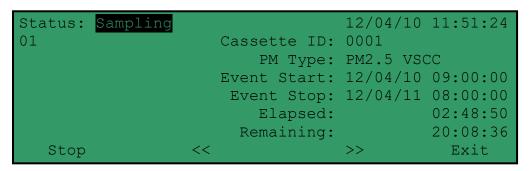



The main view (Figure 3-10) just shows the current sample timing and schedule. The << or >> soft keys below the display can be used to scroll through all available sampling parameters, in ten different view screens. The screens scroll through in a circular manner. The most important are accessed first using the >> soft key from the main view. The displayed parameter screens are summarized in Table 3-2.

View Screen	Parameters Shown
Main Status	Main view. Event schedule, elapsed time, remaining time
Current	Current ambient temperature, barometric pressure, filter
	temperature, flow, and pump status values
5 Min Values	Current 5 minute average of ambient temperature, barometric
	pressure, filter temperature, flow, and pump status values
Volume Summary	Current total sampled air volume in both actual and standard
	conditions, ambient pressure, ambient temperature, and filter
	temperature
CV Summary	The flow coefficient of variability (CV), mean, and standard deviation
	for the current sample period
Min/Max Summary	The min and max values for ambient temperature, barometric
	pressure, and filter temperature during the current sample, with time
	stamps
Filter dT Summary	The max delta temperature (dT)
	dT is the difference between the ambient temperature and the filter
	temperature during the current sample.
Warnings	Filter delta temperature warnings (when dT exceeds 5° C)
Flow Warnings	Flow regulation error warnings for the current sample.
	The Flow Waning flag is set when the flow rate exceeds a range of
	+/- 5% of the flow set point for more than 5 minutes.
	The unit is shut OFF when the instant flow rate exceeds a range of
	+/- 10% of the flow set point for more than 1 minute.
Power	Time stamp for any power interruptions during the sample
Interruptions	

#### Table 3-2 E-FRM Current Status Screen Descriptions

An example of the Current parameters screen (one press of the >> button from the main Current Event Status screen) is shown in Figure 2-1:

Current Ambient	P	760 mmHg	12/04/10 Ambient T	
Flow	1	16.67 Lpm	Filter 1	26.1C
		<<	Pump: >>	ON Exit

#### Figure 3-11 E-FRM Current Event "Current" Screen

The F2 "Previous Event Summary" in the Event menu follows the same format as the F1 "Current Event Status" described above, except values from the last completed sample are shown.

The F6 "Historical Event Summary" in the Event menu also follows the same format, but parameters from older completed samples can be viewed.

The F4 "Event Manager" option in the Event menu is simply a shortcut to the Setup > Event Manager screen, as described in Section 3.2 for configuring or editing a scheduled sampling event.

## **4 FLOW CONTROL SYSTEM AUDITS and CALIBRATIONS**

#### 4.1 Flow System Diagram

The E-FRM sampler airflow control system is simple and effective, consisting of a few rugged components in a series configuration. Proper operation of the flow system is critical in order to obtain accurate volumetric concentration data from gravimetric filter analysis. The PM<sub>10</sub> inlet and PM<sub>2.5</sub> cyclones/impactors are designed to use the inertia of the particles as they flow through the inlet in order to trap particles above a certain size or "cut-point". If the system airflow is too high or too low, then particles of the wrong size may be improperly included or excluded in error.

Periodic leak checks and airflow audits must be performed to ensure the flow rate remains within specifications. The EPA-specified flow accuracy is  $\pm 5\%$  ( $\pm 0.83$  L/min) of the 16.67 L/min design value for 5 minute flow averages. However, the E-FRM sampler is designed to maintain the flow with an accuracy of better than  $\pm 2\%$  (0.33 L/min).

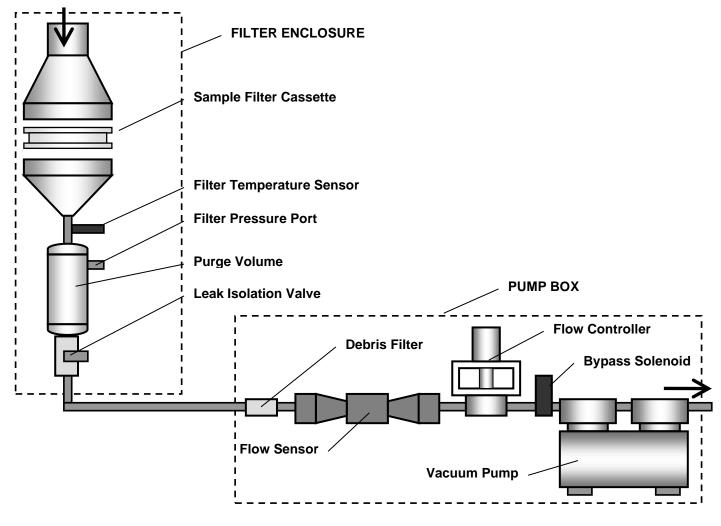


Figure 4-1 E-FRM Sampler Flow Control System

Not to scale. Simplified for clarity.

#### 4.2 Quick Temperature, Pressure, & Flow Checks Using System Test

The System Test screen can be used at almost any time to quickly check or audit the current sampler values for ambient temperature, barometric pressure, filter temperature, and flow. From the Calibrate menu, press F1 to enter the System Test screen a shown below:

System Test		12/04/10	12:32:24
Ambient P	727 mmHg	Ambient T	25.0 C
Sample P	724.2		
Flow 1	16.67 Lpm	Filter 1	25.2 C
Set Point	16.67 Lpm		
Pump: ON			
Pump			Exit

Figure 4-2 E-FRM System Test Screen

The Ambient T and Ambient P values are the current ambient temperature and barometric pressure readings from the sampler. The Filter 1 value is the current output from the filter temperature sensor located below the filter cassette, which should be within 5C of ambient at all times. Flow 1 is the current airflow rate of the sampler.

#### 4.3 Leak Check and Flow Audit Intervals

The critical aspects of filter sampler flow system maintenance include routine leak checks and temperature, pressure, and flow audits. Agencies who routinely verify these aspects almost always obtain high-quality concentration data from the unit. In general, the sampler flow rate accuracy should be audited periodically, and the flow bias assessed at least quarterly and annually. These activities are usually separated into two levels.

"*Audits*" usually consist of checking the leak, temperature, pressure, and flow values from the sampler at a single point (usually at ambient conditions) comparing these values to a traceable standard device, and simply recording the results with no adjustments. Because these audits are fairly quick, they are usually performed on a regular basis, such as monthly.

"*Calibrations*" usually consist of comparing the sampler values to the traceable standard device at one or multiple points, and making calibration adjustments to the sampler as needed. Calibration may be required as the result of a problem found during an audit, or may simply occur at a fixed interval as a matter of standard operating procedures, such as quarterly. Calibrations must always be documented.

#### 4.4 Leak Check Procedures and Leak Troubleshooting

If an air leak is found in a sampler, it usually occurs at the interface with the filter holder cassette, or within the filter cassette itself.

# The sampler has no way of automatically detecting an airflow leak during normal operation. Allowing a significant leak to persist may result in concentration data being invalidated!

Perform the following steps to check for external leaks in the E-FRM sampler system:

- 1. Remove the PM<sub>10</sub> inlet from the sampler inlet tube. Install the leak check valve in its place. Close the valve to prevent any air from entering the inlet.
- 2. Press the "Calibrate" soft key on the main screen to enter the Calibrate Menu. Press F6 to enter the Leak Test screen (Figure 4-3).
- 3. Press the Start soft key to start the leak test process. The sampler will turn on the vacuum pump until the Vacuum is greater than 55 mmHg at which time an isolation value is closed and the vacuum pump is turned off.
- 4. The system will allow the vacuum to settle for 30 seconds. A passing leak rate (less than 80 ml/min) is when the Vacuum reading is greater than the Ref reading. The leak test will run for ~5 minutes

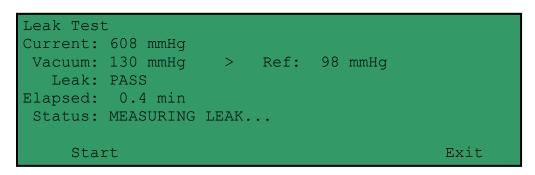


Figure 4-3 E-FRM Leak Test Screen

#### Isolating the Source of a Leak:

If the main leak check fails, the leak usually occurs at the plastic filter cassettes. Try using a known-good filter cassette. A special cassette with no filter and the two halves glued together with silicone or epoxy is a good tool for isolating leaks. The second most likely leak point above the filter cassette is a worn or broken o-ring in the PM<sub>2.5</sub> cyclone, or in the cyclone sockets. Also, make sure that the filter temperature sensor is fully seated.

A manual shutoff valve is installed in the side of the purge tank in the back of the upper enclosure. To isolate if the leak is in the upper enclosure or in the pump box, perform a regular leak check, but turn this valve as soon as the pump shuts off. This will cut the pump box out of the leak check. If the leak test subsequently passes, then the leak is located somewhere in the pump box, such as the flow controller. If the leak test still fails, then the leak is in the upper enclosure. This method works because the pressure sensor for the test in the upper enclosure and the overwhelming majority of the sample volume is also in the upper enclosure.

#### Internal Filter Bypass Leakage Test:

Per the FRM specifications in 40 CFR Part 50L, a secondary "internal filter bypass leakage" leak test must be performed to check for leaks below the filter cassette, even if the total external leak test passed. In theory, it should be impossible for this bypass leakage test to fail if the main external leakage test passed, but it is a useful test for isolating the source of a leak if the main test fails:

- 1. Configure a bypass leakage test cassette by installing a rubber membrane disc in a cassette in place of a standard filter disc. This will prevent any air from entering between the two halves of the cassette, and will also prevent any air from entering the system from any point above the cassette.
- 2. Install the special leak test cassette into the sampler and perform a leak test just as the main external leak test. The leak valve on the inlet tube is not needed.
- 3. The final bypass leak rate must be less than **80 ml/min** just as in the main leak test.

#### 4.5 Ambient and Filter Temperature Audits and Calibrations

From the Calibrate menu, press F3 to enter the Temperature Calibration screen.

(0) Amk	(0) Ambient Temperature Calibration				
Sensor 25.0		Save -30.0 50.0	Reference -30. <mark>0</mark> C 050.0 C	Save (F1 Save (F4	
Calibra	ate			Default	Exit

Figure 4-4 E-FRM Temperture Calibration Screen

There are two channels which can be audited using this screen, indicated in the top left corner. Channel (0) is the external ambient temperature sensor. Channel (1) is the internal filter temperature sensor located below the filter cassette. Use the  $\blacktriangle \forall$  keys to select the desired channel.

The "Sensor" value is the output of the selected temperature sensor. To audit the ambient temperature sensor at a single point, place your traceable temperature standard probe near the sampler ambient temperature shield. Your probe should be of the type which is not affected by solar radiation. Compare the output of your probe with the "Sensor" value shown on the sampler screen. The two should match within 1.0 Deg C. Record the results.

Each sensor can be calibrated at two points if needed. Point Pt1 is a low temperature point which is usually an ice bath if used, and Point Pt2 is a higher temperature point which is usually ambient, but could be a hot bath. The "Reference" column is where the correct temperature values from your traceable audit device can be entered into the screen for each point using the arrow keys. The "Save" column shows the currently entered calibration values associated with the Reference fields.

Press the F1 button to save the low temperature "Reference" value that you entered into the "Save" field. Press the F4 button to save the high temperature "Reference" value that you entered into the "Save" field. After both values are entered, press the "Calibrate" soft key to implement the calibration. The "Default" button clears out all calibrations and restores factory calibration values.

To audit or calibrate the filter temperature sensor, it is usually necessary to remove it from the sample line. You cannot assume that the filter sensor is at ambient conditions when installed, since it is specifically there to measure any difference between ambient and filter conditions.

#### 4.6 Barometric Pressure Audits and Calibrations

From the Calibrate menu, press F4 to enter the Pressure Calibration screen.

Pressure Calibration							
Sensor P 760	1	Save 600 800	600	ference mmHg mmHg		ave(F1) ave(F4)	
Calibrate Default Exit							

Figure 4-5 E-FRM Pressure Calibration Screen

The "Sensor" value is the output of the barometric pressure sensor. To audit the ambient barometric sensor at a single point, compare the output of your traceable pressure standard probe with the "Sensor" value shown on the sampler screen. The two should match within less than 10 mmHg. Record the results.

Each sensor can be calibrated at two points if needed. Point Pt1 is a low pressure point, and Point Pt2 is a higher pressure point. The "Reference" column is where the correct pressure values from your traceable audit device can be entered into the screen for each point using the arrow keys. The "Save" column shows the currently entered calibration values associated with the Reference fields.

Press the F1 button to save the low pressure "Reference" value that you entered into the "Save" field. Press the F4 button to save the high pressure "Reference" value that you entered into the "Save" field. After both values are entered, press the "Calibrate" soft key to implement the calibration. The "Default" button clears out all calibrations and restores factory calibration values.

#### 4.7 Flow Audits and Multi-Point Calibration

The ambient temperature and pressure sensors must be audited or calibrated before the flow is audited, because the actual volumetric flow rate of the sampler is corrected to the ambient conditions. The flow system must also be evaluated for leaks before any flow checks are performed. Make sure that a filter cassette is correctly installed in the sampler during the flow checks.

Multi-Point Flow Calibration								
<cal> FLOW 1 FLOW 2 FLOW 3</cal>	Target 15.00 18.40 16.67	Reading 16.67	STD 15.0 L 18.4 L 16.7 L	PM				
CAL	NEXT	DEF	FAULT	EXIT				

#### Figure 4-6 E-FRM Multi-Point Flow Calibration Screen

- 1. Remove the PM<sub>10</sub> inlet from the sampler and install your traceable flow audit sampler onto the inlet.
- 2. From the Calibrate menu, press F2 to enter the Flow Calibration screen on the sampler as shown in Figure 4-6. The unit will automatically turn on the pump and begin to regulate at 15.0 L/min.
- 3. (Optional Audit Only) To perform a simple flow "check" or "audit" in which no E-FRM calibrations are to be changed, simply use the NEXT soft key to select the FLOW 3 (16.67) parameter. Compare the E-FRM column reading to your standard device for the selected parameter, and record the results. No calibrations are altered if the CAL or DEFAULT keys are not pressed. If calibration is required, continue to step 4.
- 4. Allow the unit to regulate the flow until the BAM reading stabilizes at the target flow rate. Enter the flow value from your standard device into the STD field using the arrow keys, then press the CAL soft key. Note: The E-FRM flow reading will not change to match the STD until after you have entered all three flow calibration points, since it is done on a slope.
- 5. Press the NEXT key to select the second flow point of 18.4 L/min. Allow the flow to stabilize again, then enter the value from your standard device and press the CAL key. Note: If the E-FRM is unable to achieve flow regulation at the 18.4 L/min point, this could be an early indication that the vacuum pump needs to be serviced.
- 6. Press the NEXT key to select the third flow point of 16.67 L/min. Allow the flow to stabilize again, then enter the value from your standard device and press the CAL key.
- After this third flow point is calibrated, the E-FRM flow reading will change to show the corrected flow, then the E-FRM will re-regulate the flow to 16.67 L/min based on the new calibration. The E-FRM flow reading should now match your flow standard device at 16.67 ± 0.1 L/min. Exit the calibration menu.

8. If difficulty is encountered, press the "Default" button to clear out all previous calibrations and restores factory calibration values, the retry the calibration starting at step 4.

## 5 MAINTENANCE and TROUBLESHOOTING

This section provides information about routine maintenance, identifying errors and alarms, and performing diagnostic tests if a problem is encountered on the E-FRM. The TEST menu functions are also described in this section.

#### 5.1 Met One Recommended Periodic Maintenance Table

Table 3-1 shows the recommended interval for the regular maintenance, field checks, and service tasks.

Maintenance Item	Period
Leak check.	Daily
Flow system check/audit.	Monthly
Clean PM10 inlet particle trap.	Monthly
Clean PM <sub>2.5</sub> cyclonic separator particle trap. (if used)	Monthly
Clean PM <sub>2.5</sub> WINS Impactor well, replace filter and oil. (If used)	Monthly
Check or set real-time clock.	Monthly
Complete flow system calibration.	Quarterly
Completely disassemble and clean PM10 inlet and PM2.5 cyclone.	Quarterly
Replace or clean pump mufflers.	6 months
Clean internal debris filter.	12 Months
Clean vertical inlet tube.	12 months
Rebuild vacuum pump.	24 months

Table 5-1 Recommended Maintenance Schedule for the E-FRM Sampler

#### 5.2 Sampler Error and Alarm Descriptions

Errors and alarms may occur in the sampler as a result of operational conditions outside of the specified ranges, machine malfunctions, or data flags. Many of these alarms are defined by regulation in 40 CFR Part 50L. The alarms may be shown on the sampler LCD display, or in the sample event data log files.

## 5.3 Basic Problem and Cause/Solution Table


Table 5-2 contains information on some of the more common sampler problems which may be encountered, and some steps to identify and remedy the problems. Met One welcomes customer suggestions for new items to include in this section of future manual revisions. If the solution cannot be found in the following table, then contact one of our expert service technicians for help in resolving your problem.

Problem:	The Sampler won't start a measurement cycle.
Cause/Solution:	<ul> <li>The unit is programmed not to start a sample cycle until the beginning of a scheduled sample event. Make sure the sampler clock is set correctly. Check the event schedules in the Setup and Event menus.</li> <li>The unit will usually display an error if it cannot start a new sample cycle.</li> </ul>
Problem:	The airflow rate is too low and won't adjust up to 16.67 L/min.
Cause/Solution:	<ul> <li>The pump mufflers may clog up after several months.</li> <li>The vacuum pump may need to be rebuilt after about 2 years.</li> <li>Checking a high 18.4 L/min flow point during the regular flow audits is a good way to verify the pump capacity.</li> </ul>
	<ul> <li>Check the inlet and PM heads for obstructions.</li> </ul>
Problem:	The airflow is stuck at a particular rate, and will not change.
Cause/Solution:	<ul> <li>The alriow is stuck at a particular rate, and will not change.</li> <li>The flow controller unit can become stuck if debris enters the rotary valve. The valve can be disassembled and cleaned. Contact the Service dept.</li> <li>Perform the multi-point flow audit in the Calibrate menu. The unit should try to regulate to these flow values. If the flow does not change, the flow controller may not be working.</li> <li>Unplug the pump power while performing a flow check. With the pump off, you should be able to clearly hear the flow controller pulse at 1-second intervals as it rotates and attempts to regulate the flow. If not, the flow controller is not working or the circuit board output is not working.</li> <li>If the flow regulates lower, but not higher than 16.67 lpm, the pump is probably worn out, or there is a leak.</li> </ul>

 Table 5-2 Common Problems and Solutions

## 6 DATA RETRIEVAL

The E-FRM sampler data must be retrieved using Met One FSCommAQ software, either through the serial port, USB port, or by transferring data to a USB flash drive. For detailed instructions, please see the FSCommAQ software manual. The FSCommAQ software and manual are available at the Met One website (<u>https://metone.com/software</u>).

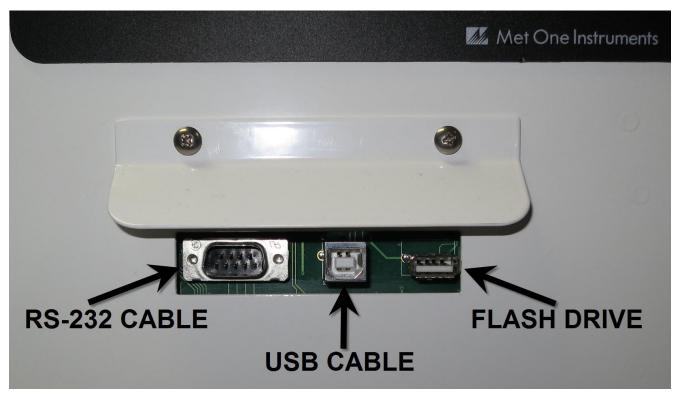

**Table 6-1 Front Panel Digital Connections** 

#### 6.1 Using the RS-232 or USB Cable Connections

Insert a standard 9-pin serial or USB cable in to the corresponding connection point. Connect the other end to a PC running the FSCommAQ software and follow the instructions I the FSCommAQ Manual. Once the data download is complete you may disconnect the cable from both the E-FRM sampler and your computer.

#### 6.2 Using a USB Flash Drive

Insert a USB flash drive in to the USB port located beneath the keypad on the inside of the door of the sampler. Press the TRANSFER DATA soft key to enter the Transfer Data to USB Drive screen. Press the Transfer Data soft key and the data transfer will begin. It may take a couple of minutes to start the transfer process. Once it reaches 100%, all data stored in the E-FRM memory has been downloaded to the drive. Press the Exit soft key to return to the main menu. Remove the flash drive and take it to your computer.

## 7 SERIAL COMMUNICATIONS

There are two modes of serial communication:

- <u>User communication</u> This is a user interactive mode using simple letter commands for ease of use.
- <u>Computer communication</u> This mode is used for computer-to-device communication and includes a level of data integrity.

#### 7.1 User Communication

In the User Communication (or Terminal) mode, commands are issued by entering a letter or number command and then pressing the Enter, <cr>, key. The <Esc> key is not used when sending commands in this mode.

Press the Enter key three times to enter User Communication mode. An asterisk character appears confirming you have entered the mode and that the instrument is ready for a new command. Commands will be echoed back from the instrument and an asterisk will appear after a command has completed.

Command	Description
#	Request Met Record Revision
1	Request settings report
2	Request All User data report
3	Request New User data report
4	Request Last User data report
С	Clear Event and Data Log
D	Get/Set date part of the real time clock
Н	Help menu
Q	Quit out of terminal mode
Т	Get/Set time part of the real time clock
DT	Get/Set the date and time of the real time clock
ID	Get/Set location ID or address
OI	Get/Set output interval
QH	Report current readings header
RQ	Report current readings without header
RV	Report Model/Part/Revision
SS	Get Met One serial number

#### **Table 7-1 Serial Command Set**

To issue one of the commands listed in Table 7-1, type the command listed and press the Enter key. The command will run and display the requested information or current setting, as appropriate.

For example, to view the current date setting you would type the letter D followed by the Enter key. You would then see the current date reported. The sequence would appear like this:

D<cr> D 2013-01-18<cr><lf>

To change a setting, the typical sequence is to type the command, press the space bar one time, enter the new value in the same format that is displayed when checking the setting, and then pressing the Enter key.

Continuing the example above, to change the date setting you would type the letter D, space, and then the current date in YYYY-MM-DD format followed by the Enter key. You would then see confirmation of the new date reported. The sequence would appear like this:

```
D 2016-01-30<cr>
```

D 2016-01-30<cr><lf>

Pressing <Esc> or Q<cr> will exit terminal mode.

For a detailed listing of all command formats, consult the E-FRM 7500 document contained on the CD included with your sampler or contact the Met One Instruments service department. See section 1.2.

#### 7.2 Computer Communication

In the Computer Communication mode, character echo is suppressed. This means if you are issuing commands in this mode using a keyboard, you will not see what you are typing displayed on the screen. The command format includes a checksum to verify data integrity.

The mode is entered whenever an <Esc> character is sent to the instrument. Commands are issued using the following format:

<Esc>Cmd p1 p2\*cs<cr>

Computer commands are prefaced with an <Esc> character followed directly by a command (Cmd).. After the command there can be zero or more parameter field (p1 and p2) where each field is separated by a space. The end of the message is signaled by the Checksum Delimiter character (\*) followed by the checksum itself (cs). Finally, the command is terminated with a carriage return (<cr>

A computer command example requesting the Model/Part/Revision numbers would look like this:

<Esc>RV\*1234<cr>

All command responses are terminated with a checksum. The above command response would have this format:

RV 092, 99999-1, R9.9.9\*1234<cr><lf>

For a listing of all command formats and additional in depth Computer Communication details, consult the E-FRM 7500 document contained on the CD included with your sampler or contact the Met One Instruments service department. See section 1.2.

## 8 ACCESSORIES and PARTS

## 8.1 Consumables, Replacement Parts, and Accessories

The following parts are available from Met One for maintenance, replacement, service, and upgrades. If unsure about a part you need, please contact the Service department and

provide the serial number of your E-FRM. Some of these parts require technical skills or special considerations before use or installation.

#### Consumables

Description	Part Number	Graphic
Filter, 47MM, PTFE, FRM	460122	
Filter Cassette, FRM, 47 MM	460128	
Fan Filter, Replacement, 5 PACK	560001	
Silicone O-Ring Grease, mini packet	995712	

#### **Calibration & Service Tools**

Description	Part Number	Graphic
Flow Inlet Adapter Kit (Leak Test Valve) Includes short inlet tube adapter.	BX-305	
Volumetric Flow Calibration Kit (BGI deltaCal™) Flow, Temp, and Pressure Reference Standards Met One recommended flow meter	BX-307	

#### Vacuum Pumps & Pump Parts

Description	Part Number	Graphic
Pump, Vacuum	680897	
Muffler, Pump Exhaust	580293	

## Flow System Components

Description	Part Number	Graphic
Flow Sensor, Mass, 0-20 LPM, Internal Assembly	81892	*
Automatic Flow Controller	82099	
Inline Filter	580299	*

#### **Electrical & Electronic Parts**

Description	Part Number Graphic			
Pressure Sensor Circuit Board	80940-1			
Control Panel Assembly	81151			

## **Inlet Components**

Description	Part Number	Graphic
PM10 Size-Selective Inlet Head, EPA Specified	BX-802	
TSP Sampling Inlet, with insect screen	BX-803	
PM2.5 Sharp Cut Cyclone	BX-807	Π
PM2.5 Very Sharp Cut Cyclone, BGI Inc. VSCC™ Used for PM2.5 FEM monitoring	BX-808	
PM2.5 URG-2000-30EGN Cyclonic Separator Used for PM2.5 FEM monitoring	BX-809	
PM2.5 WINS Impactor	BX-804	
O-Rings, BX-807 SCC Cyclone, set of 6	720097	
O-Rings, BX-808 BGI Cyclone, set of 8	720105	
O-Rings, BX-809 URG Cyclone	720228	
O-Rings, PM10 Head, set of 3	8965	
O-Ring, Inlet Tube Receiver, 2 required.	720069	

## **Meteorological Sensors**

Description	Part Number	Graphic
Ambient Temp Sensor Assembly -50 To +50 Deg C	80866	

#### **Audit Sheet**

Model:	Serial Number:	
Audit Date:	Audited By:	

Flow Audits							
Flow Reference Standard Used:	ce Standard Used: Model:		Serial No:		Calibration Date:		
Temperature Standard Used:	Cemperature Standard Used:         Model:		Serial No:		Calibration Date:		
Barometric Pressure Standard Us	sed: Mod	del:	Seria	l No:	Calil	bration Date:	
Leak Check Value:	as found:	lpm		as left:	lpm		
		E-FRM	Ref. Std.		E-FRM	Ref. Std.	_
Ambient Temperature:	as found:	C	С	as left:	С	С	N/A
<b>Barometric Pressure:</b>	as found:	mmHg	mmHg	as left:	mmHg	mmHg	_
Flow Rate (Actual Volumetric):	as found:	lpm	lpm	as left:	lpm	lpm	N/A

Mechanical Audits										
Fan filters clean:	as found	as left								
PM10 particle trap clean:	as found	as left								
PM10 drip jar empty:	as found	as left								
PM10 bug screen clear:	as found	as left								
PM2.5 particle trap clean:	as found	as left								
Pump muffler unclogged	as found	as left								

Error	Date	Time		Error	Date	Time
1			4			
2			5			
3			6			

#### Audit Notes:

Manual Notes: