



OPX 1025

Optical PM Mass Monitor

The **OPX 1025** is a continuous particulate matter (PM) monitor using optical particle spectrometer technology with a polychromatic light source. It measures and records PM concentrations (e.g., $PM_{2.5}$, PM_{10}) by analyzing particle size and count from scattered light signatures and applying the proprietary RealPM size/density mass conversion algorithm, which automatically accounts for environmental factors.

Ambient air is drawn at a controlled flow rate through a size-selective (or optional TSP) inlet, conditioned via a Smart Heater, and analyzed in real-time, providing accurate, low maintenance mass concentration data.

Key features

- **Advanced Optical Particle Spectrometer**

Polychromatic light source with 4,096 raw size bins, combined into 100 bins for mass conversion.

- **RealPM Dynamic Mass Conversion Algorithm**

Size/density algorithm designed for high accuracy across varying environmental conditions.

- **Comprehensive PM Reporting**

Simultaneous real-time PM_{10} , $PM_{2.5}$, PM_4 , PM_{10} , and coarse fraction ($PM_{10-2.5}$) plus particle count and size histograms.

- **Controlled Sampling System**

PM_{10} or TSP inlet, 16.67 LPM flow control, Smart Heater for humidity/temperature conditioning, and sheath flow optics protection.

- **High Sensitivity**

Greater sensitivity than traditional continuous PM mass monitor methods.

- **User-Friendly Operation**

Intuitive touchscreen interface with advanced diagnostics for quick troubleshooting.

- **Advanced Communications**

Remote operation capability with cloud-based data access and integration with meteorological and other sensors.

- **Precision Calibration**

Factory-calibrated against reference units; size accuracy verified with PSL and SigmaDust standards.

- **Low Maintenance**

Minimal consumables required, and sheath-flow over optics reduces cleaning intervals.

- **Produced by an industry-leading ISO Certified facility.**


- **Time-tested reliability backed up by a 2-year Warranty.**

- **Sensor LED backed by 10-year manufacturer's warranty (parts only, field replaceable)**

Applications

- Ambient air quality monitoring ($PM_{2.5}$, PM_{10})
- Industrial and emissions monitoring
- Construction and mining site dust control
- Roadside and traffic pollution studies
- Fence-line and community monitoring
- Research and environmental studies
- Indoor air quality assessments
- Mobile or temporary monitoring campaigns



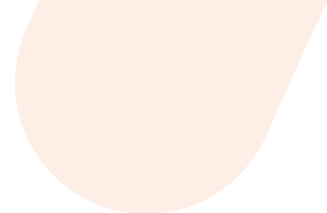

Specifications	
Measurement Principle	Broadband spectroscopy using 85°–95° light scattering with polychromatic LED
Particle Size Resolution	0.18 – 24µm range over 100 sizing channels
PM Mass Measurements	PM ₁₀ , PM _{2.5} , PM _{10–2.5} , as well as PM ₄ , PM ₁ , and TSP*
PM Mass Measurement Range	0.0 – 10,000+ µg/m ³
Data Display Resolution	0.1 µg/m ³
Lower Detectable Limit	< 0.1 µg/m ³
Measurement Interval	10 seconds
Averaging Periods	User Adjustable: 1m – 24hr
Mass Concentration Accuracy	Meets or Exceeds US EPA PM ₁₀ FEM and Class III PM _{2.5} & PM _{10–2.5} FEM performance requirements compared to FRM samplers
Flow Rate	16.67 lpm
Flow Accuracy	±1% (Typically within ±0.5%)
Operating Temperature	0 – 50°C (inside shelter/enclosure)
Ambient Sample Temperature	–40 – 60°C
Ambient Sample Relative Humidity	0 – 100%
Sample RH Control	24VDC 150W (max) heater controlled to 35% RH or lower
Enclosure / Shelter	Requires weatherproof enclosure/shelter with 0–50°C, non-condensing environmental control
Instrument Warm-up Time	< 5 minutes
User Interface	Large graphic touchscreen display with intuitive layout / menu structure, and remote interface

Specifications	
Internal Data Storage	1 year of internal data storage, including all PM values, peripheral measurements, and size histograms
Data Download	Two Front Panel USB Flash Drive Ports (1xUSB-A and 1xUSB-C), and Ethernet and serial ports on rear panel
Ambient Sensor	Model BX-597A combination Temperature/Pressure/RH sensor
Optional Sensor Inputs	Smart Sensor inputs such as digital wind speed and direction (i.e. Met One Model AIO 2)
Electrical	100 - 240 VAC, 50/60Hz; 190W (max) power consumption, 50W typical
Instrument Dimensions (HxWxD)	26.7cm x 43cm x 40cm (10.5" x 17" x 15.8")
Instrument Weight	31 lbs (14 kg)
Sample Conditioner Dimensions	88.6cm x 6.35cm (34.875" x 2.5")
Sample Conditioner Weight	4.2 lbs (1.9 kg)
Warranty	2-year standard instrument warranty 10-year manufacturer's warranty on sensor LED [^]
Certifications (pending)	US EPA PM ₁₀ Federal Equivalent Method US EPA Class III PM _{2.5} Federal Equivalent Method US EPA Class III PM _{10-2.5} Federal Equivalent Method

*Using optional TSP inlet; ^ parts only, field replaceable

Supplied Accessories

- Sigmadust
- **BX-597A** Temperature/RH/Pressure Sensor
- Operation manual
- Calibration certificate
- Quick start guide
- **BX-802** PM₁₀ Inlet

Optional Accessories

- **BX-801** Sample Inlet System with Support Braces
- TSP Inlet
- AIO 2 Weather Station
- **BX-925B** Weatherproof Enclosure with Heater
- **BX-925B-AC** Weatherproof Enclosure with Heater and Air Conditioner



POWERED BY ACOEM

Specifications subject to change without notice. Images used are for illustrative purposes only. All trademarks and registered trademarks are the property of their respective owners.

© 2025 Acoem and all related entities. All rights reserved. 20250911

metone.com